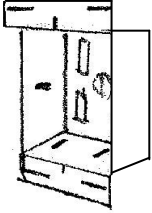
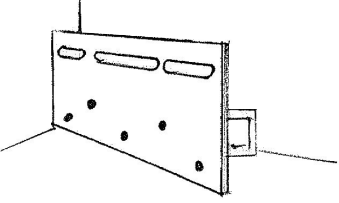
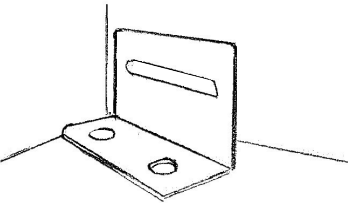
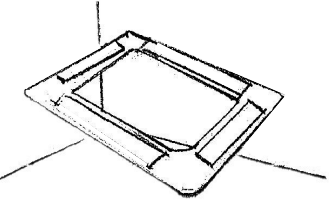
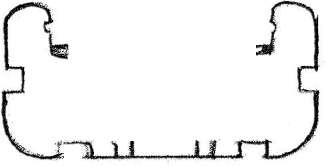

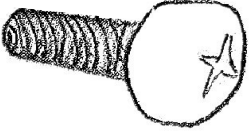
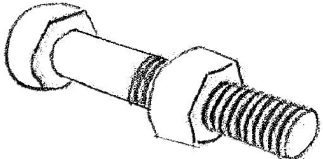


	PART NO.	DESCRIPTION
	SPA001	ACCESSORY BOX, 2 X 6G SELF TAPPING SCREWS, 2 X M5 SCREWS, EARTH WIRE & TUNNEL TERMINAL
	PA002	CEILING FIXING KIT FOR 'T' BAR
	SPA003	FIXING BRACKET FOR WALL & FLOOR FITTING
	SPA005	CEILING FLANGE
	SPABXXX	MAIN BODY EXTRUSION
	SPALXXX	CLIP IN LID EXTRUSION
	M5	SCREW FOR THREAD SLOT IN EXTRUSION
	M6	BOLT & NUT FOR RECTANGULAR SLOT

1. Tighten screws to bite into 'T' bar
2. Position bolt heads in rectangular slot in main body extrusion
3. Adjust pole into position and tighten thumb nuts

Remove double sided tape clear protective film from surround and press tightly to dust free surface

Trim lid to suit. Position site cut end in ceiling void

Flexible conduit for comms/electrical segregation

3-Pre fitted accessory boxes with earth wire G6 self taper M5

200mm Pre-cut extrusion for bottom of pole

Fix PA003 bracket to floor

Using M5 screws fix bracket to pole