



INSTALLATION GUIDE

Vero – 4x Gang – 65W


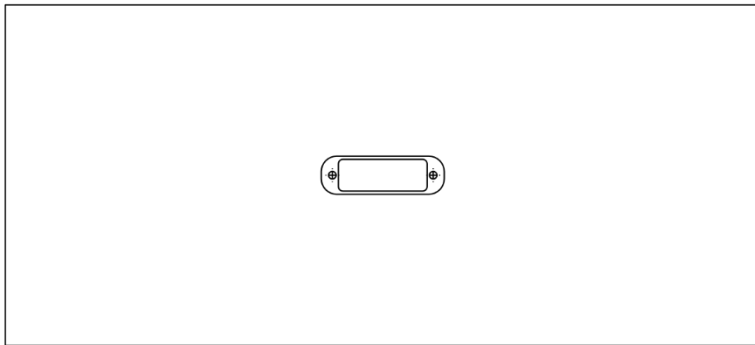


1. Precision machine cutout into desk or joinery as per the size/tolerance listed on the Technical drawing of the model selected


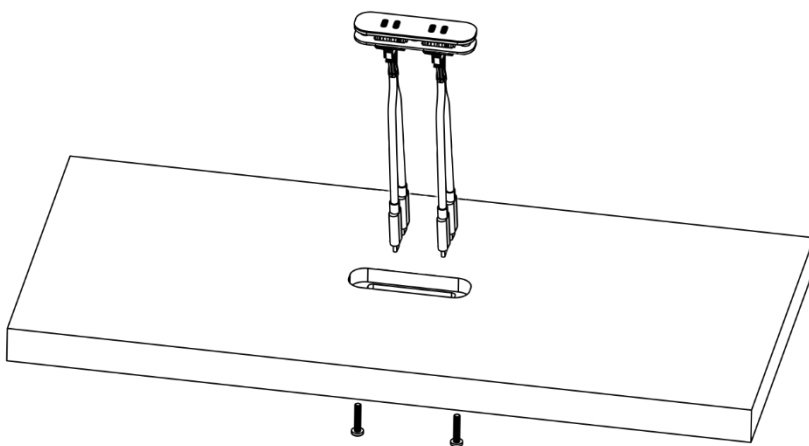


2. Install the USB Keystone cables into the Vero module, ensuring the correct alignment of connections

3. Insert the Vero Module into the cutout and secure the unit from below using the screws provided (*do not over tighten*)

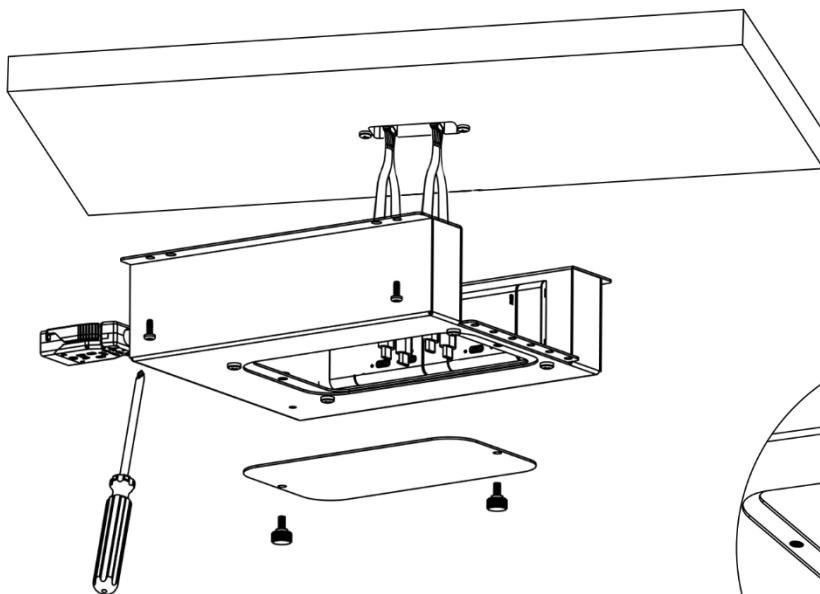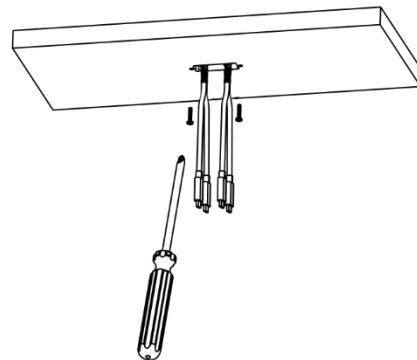

4. Install the undercarriage unit surrounding the Vero module using the correct length self tapping screws

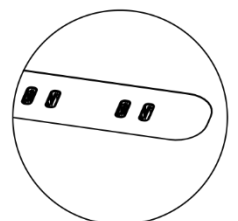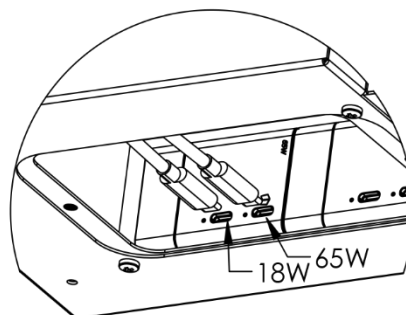

5. Remove the access hatch to plug the USB leads into the USB module
(*Ensure the correct leads go into each port*)

6. Replace the hatch on the undercarriage unit

7. To power the Vero, connect the TAG Lead or 3-Pin Plug Lead

