



INSTALLATION GUIDE

Vero – 8x Gang – 140W


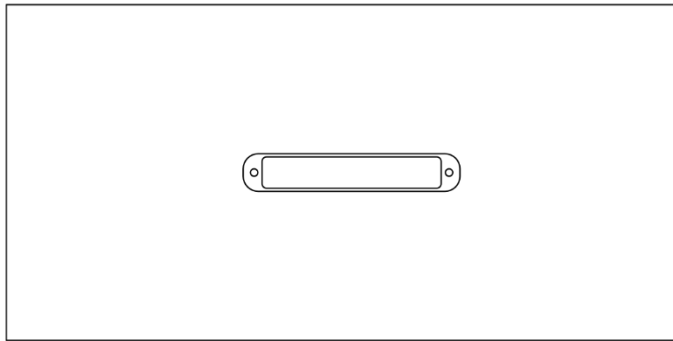


1. Precision machine cutout into desk or joinery as per the size/tolerance listed on the Technical drawing of the model selected

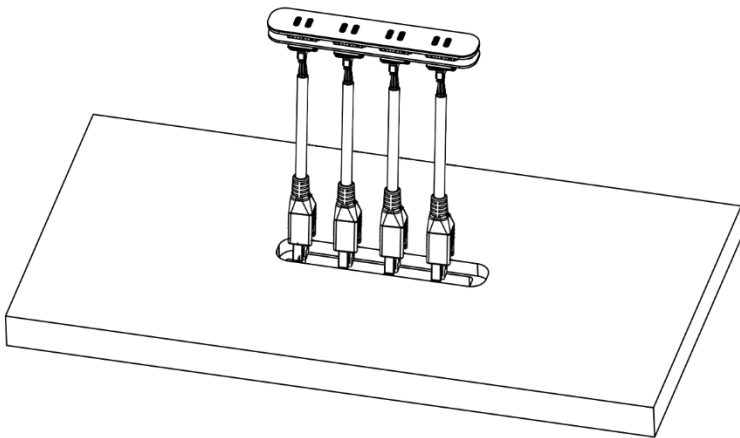


2. Install the USB Keystone cables into the Vero module, ensuring the correct alignment of connections

3. Insert the Vero Module into the cutout and secure the unit from below using the screws provided (*do not over tighten*)

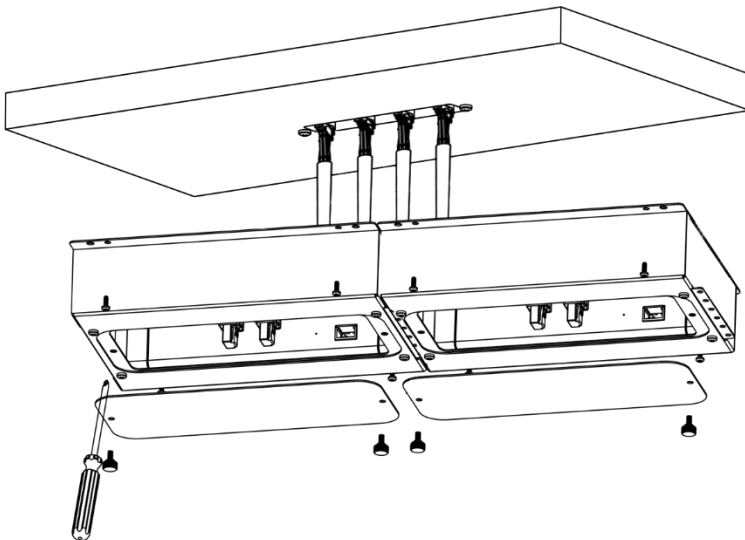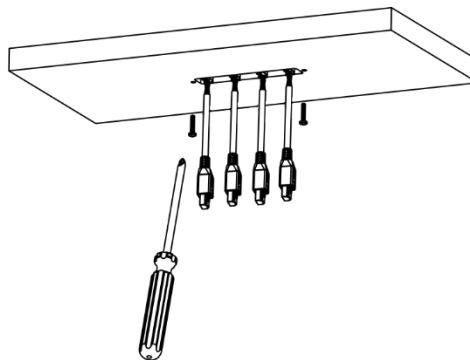


4. Install both undercarriage units at equal distance surrounding the Vero module using the correct length self tapping screws

5. Remove the access hatch to plug the 12-Pin USB leads into the USB module

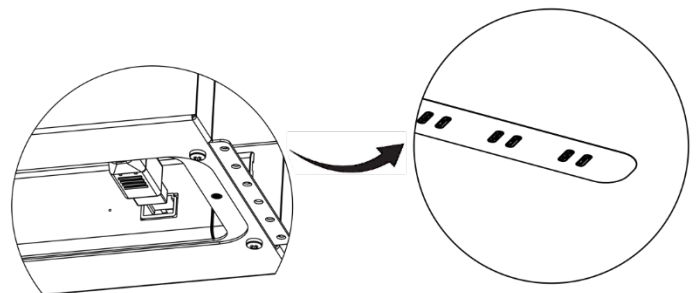

6. Replace the hatch on the undercarriage units & connect the two TAG Leads from the undercarriages together using the L3D splitter

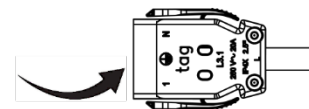

7. To power the Vero, connect either a TAG Lead or 3-Pin Plug Lead into the splitter