
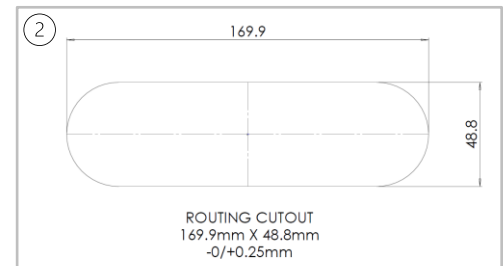


NOVA IN-DESK POWER UNIT

Nova In-Desk Installation Instructions


STEP 1 – CUTOUT

CNC route the Nova Duo (1) OR Trio (2) cutout into the tabletop. If desired, you can also include pilot holes to position the mounting bracket.

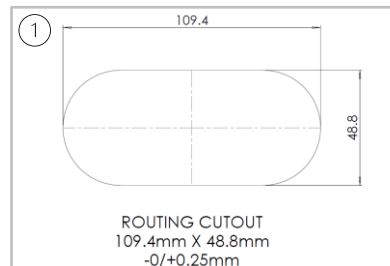

STEP 2 – ADJUSTING BRACKET TO SUIT TABLETOP THICKNESS

Remove 4x screw (3) to adjust the bracket to the required height. Available thicknesses along central hole columns are: 18mm, 20mm, 25mm & 32mm. Each of these heights has an additional hole to either side that will allow for +1/-1mm in height (except 18mm hole).

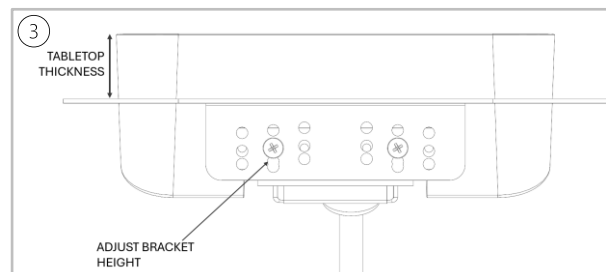

STEP 3 – INSTALLING UNIT INTO THE DESKTOP

Insert the unit into the routing detail from below (4).

Once in position screw the bracket into place (5).

Once installed unit should sit flush with desktop (6).

