


AXESSS & CIRQLATE UMBILICAL


1 LENGTH OF UMBILICAL

Umbilical section click together to form the desired length

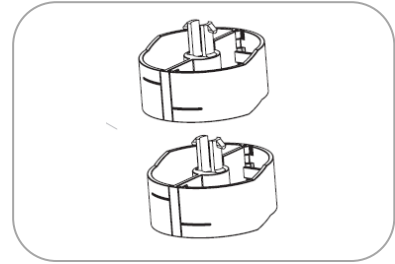


2 PLACEMENT

Place the umbilical in the desired location and confirm the floor base is sitting flat on the floor

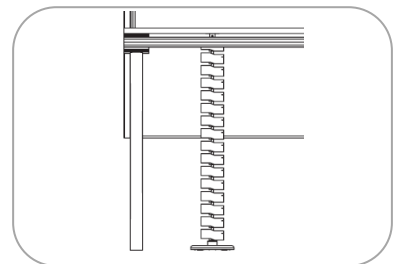


3 FIXING TO TABLE TOP

Using the screws provided screw the plastic top hat to the underside of the table.

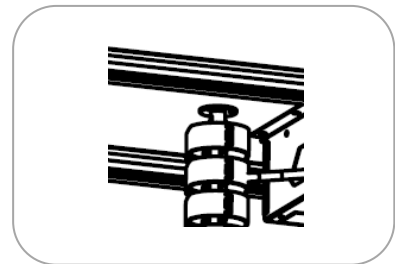

4 FEEDING CABLES THROUGH UMBILICAL

Feed power cables and Data cables through the umbilical to desk box and/or power rail.

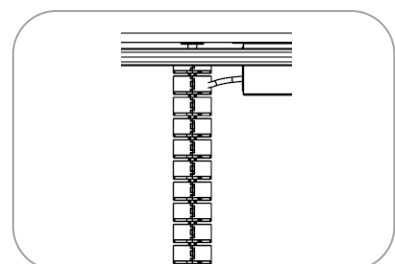

5 CONNECT TO POWER

Plug into power source

